

Fig. Ia

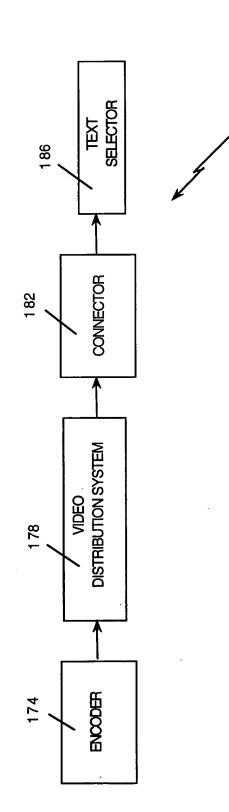
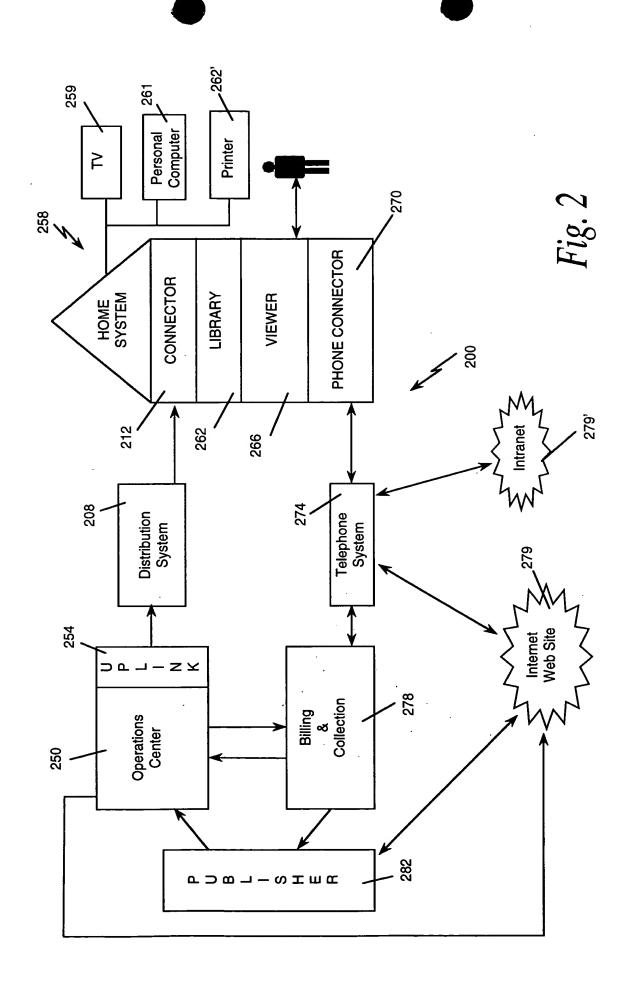


Fig. 1b



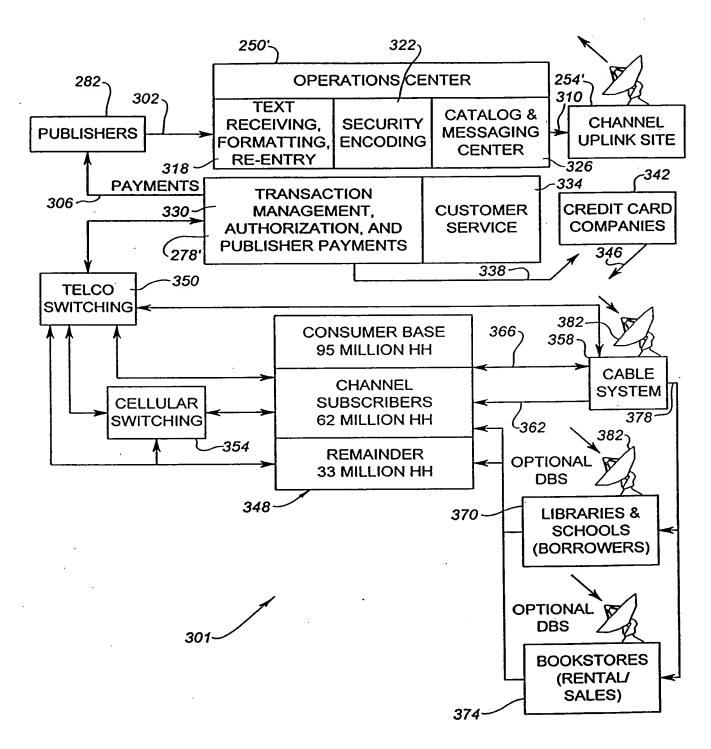
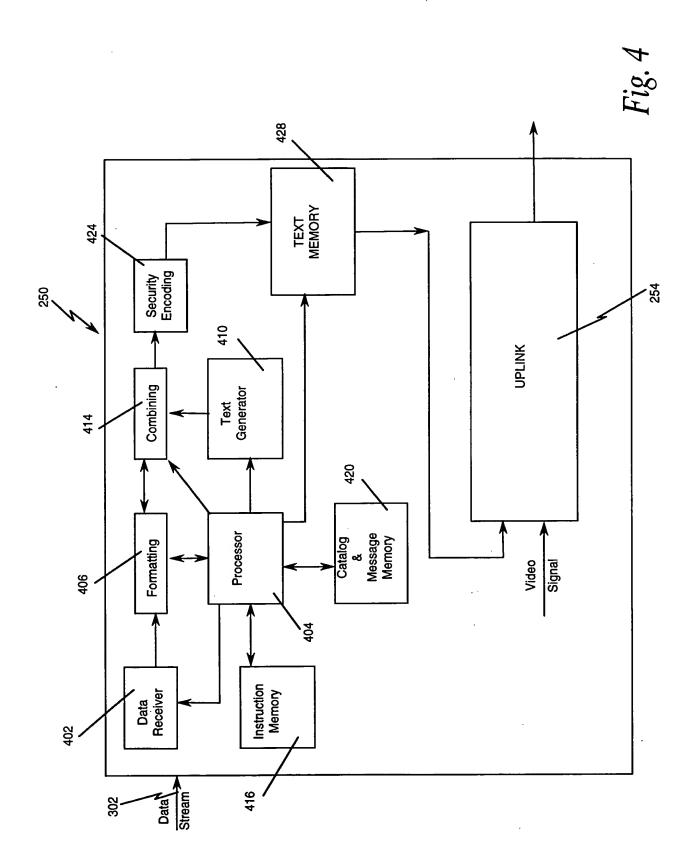


Fig. 3



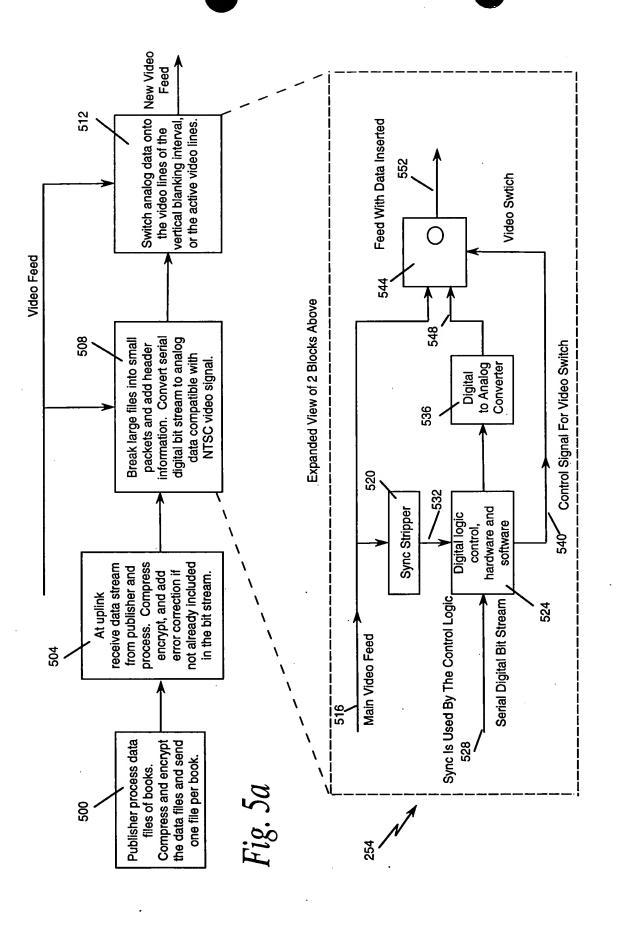
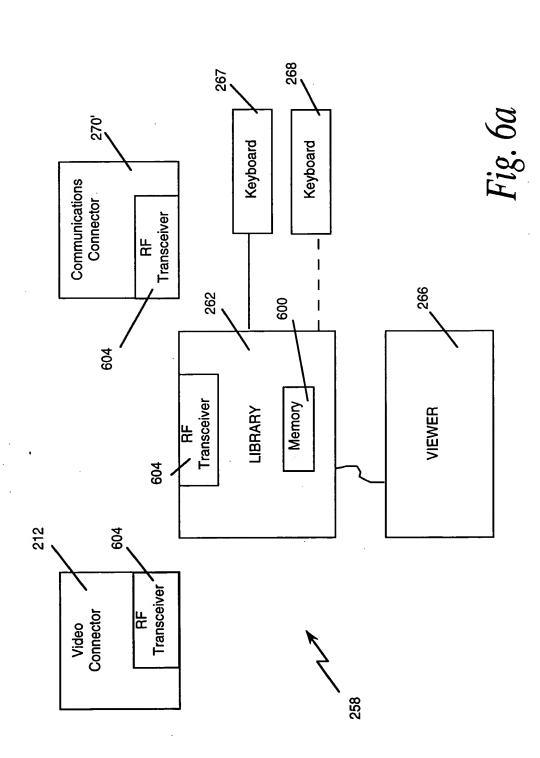
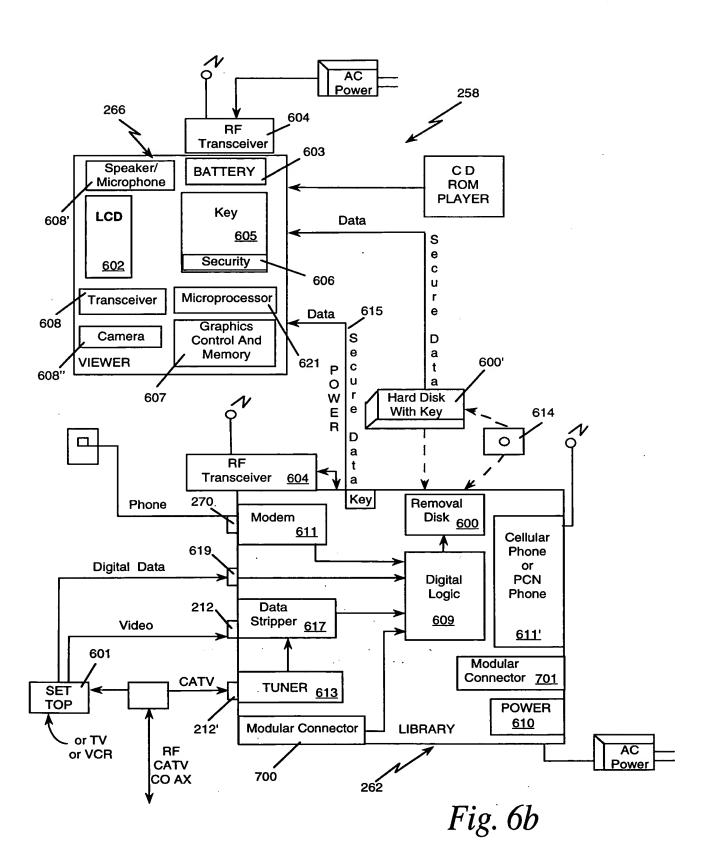


Fig. 5b





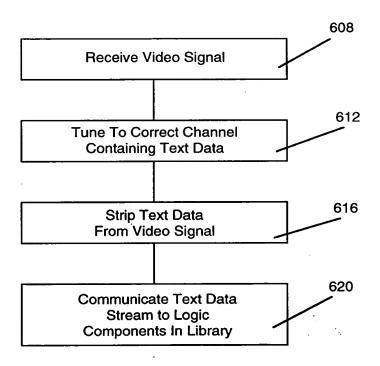


Fig. 7

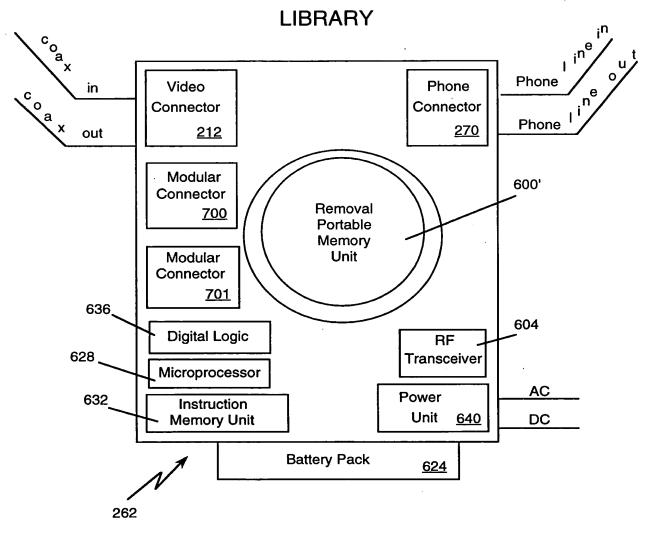
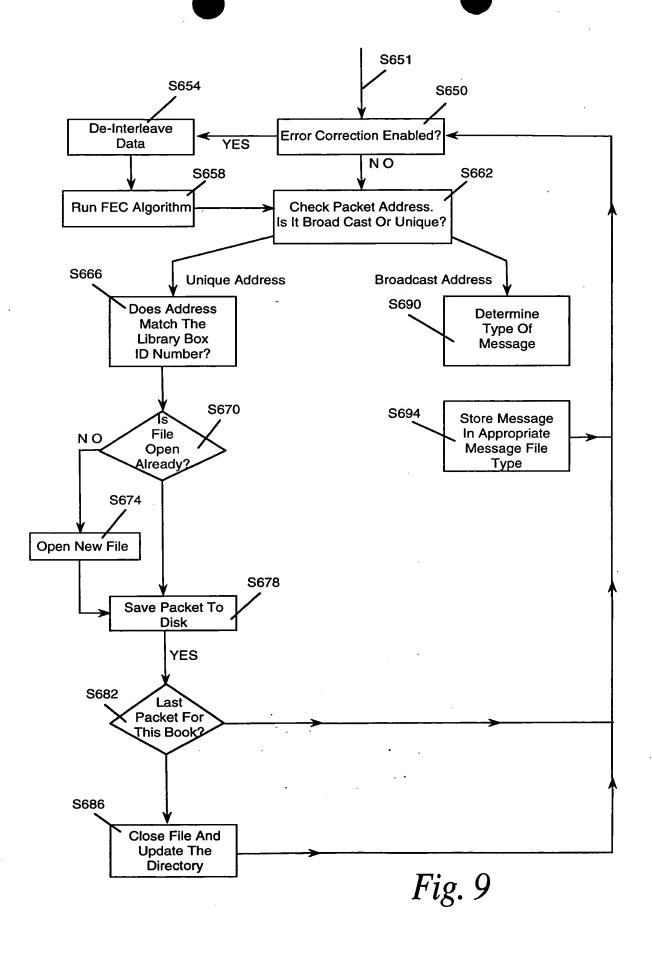


Fig. 8



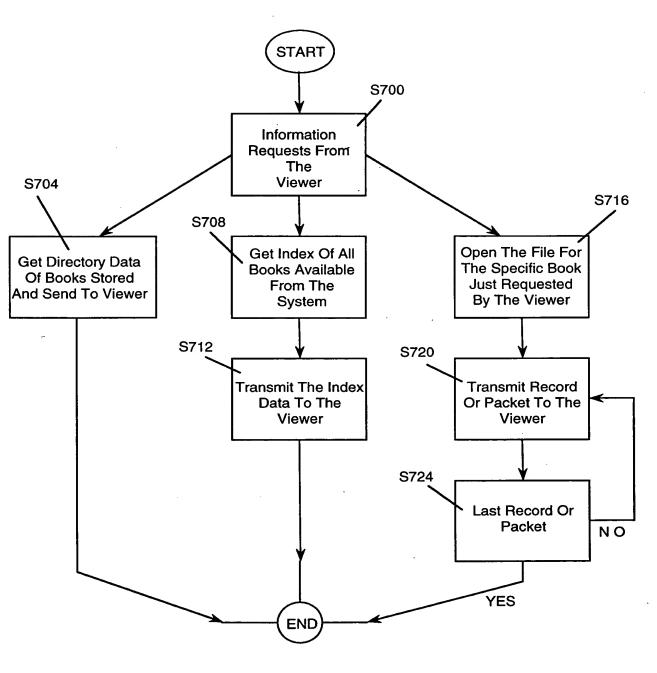


Fig. 10

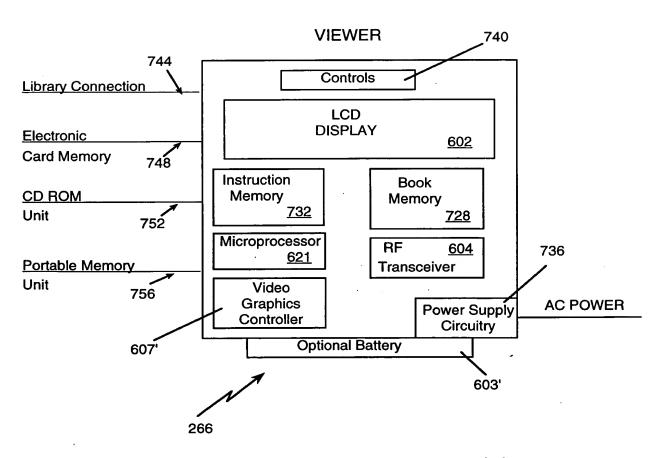


Fig. 11

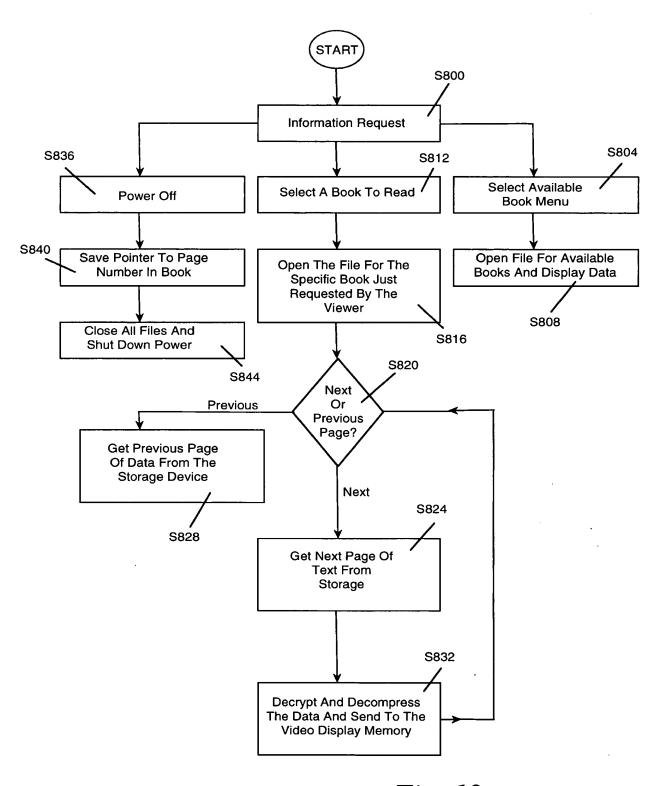


Fig. 12

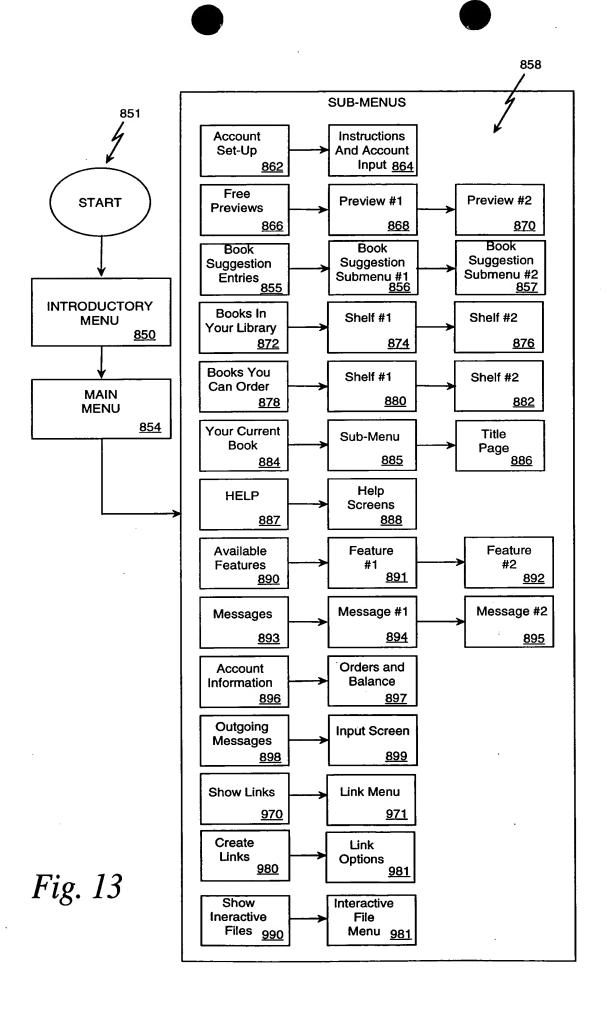


Fig. 14a

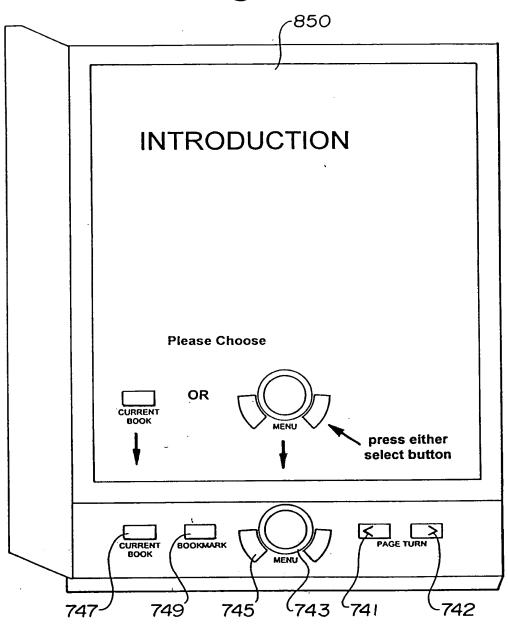


Fig. 14b

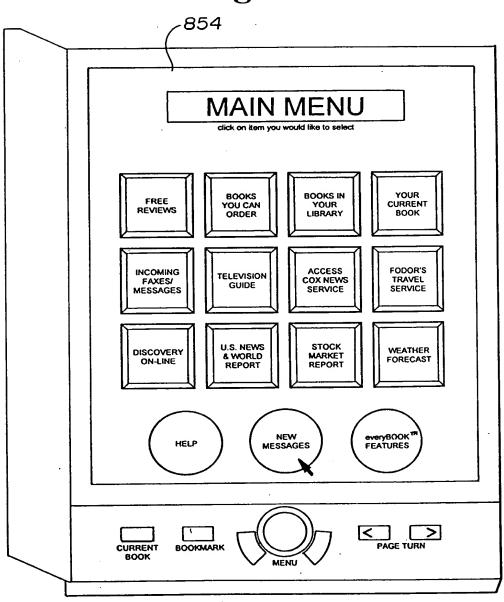


Fig. 14c

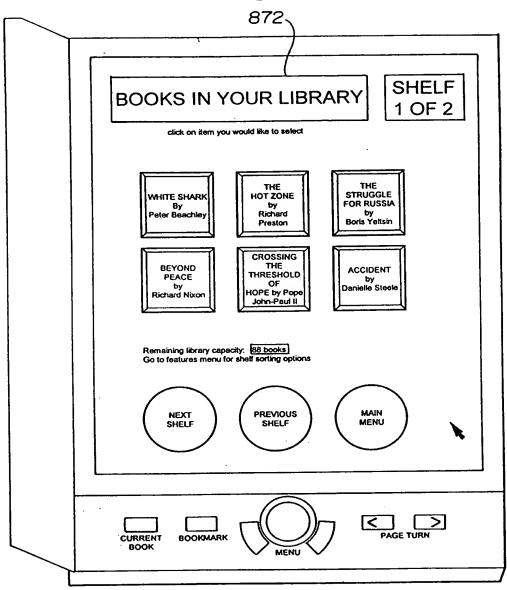


Fig. 14d

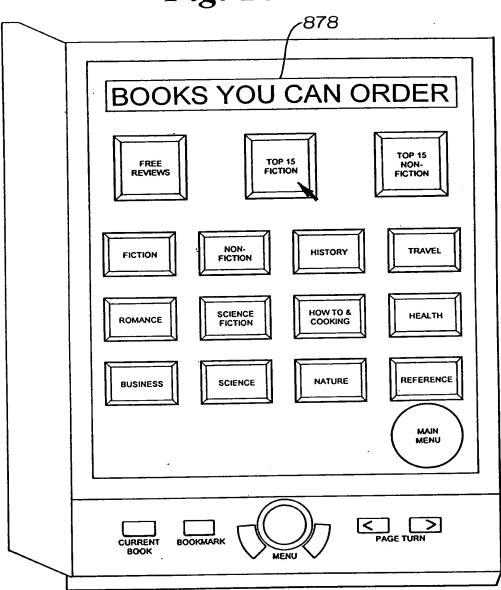


Fig. 14e

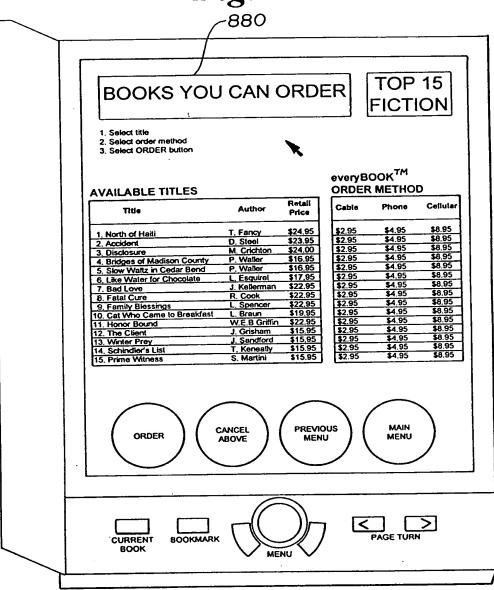


Fig. 14f

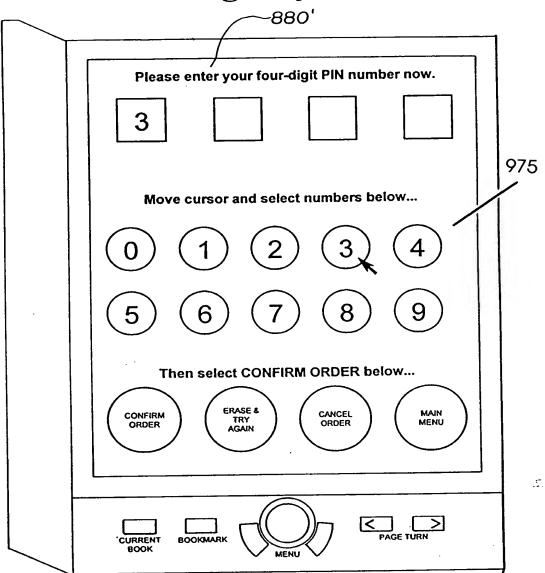


Fig. 14g

₇862 SCREEN SET UP ACCOUNT 1 OF 6 Enter a four-digit PIN number to protect Step 1 your credit card information. 3 Move cursor and select numbers below... Write down your MAIN MENU CANCEL ORDER PIN code and keep it in a secure place. CURRENT BOOKMARK

Fig. 14h

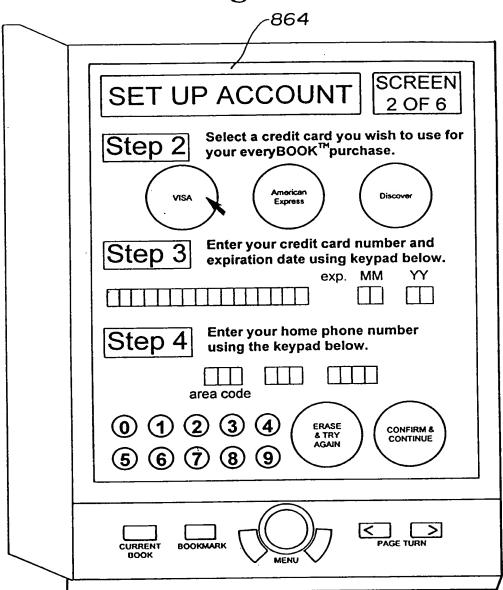


Fig. 14i

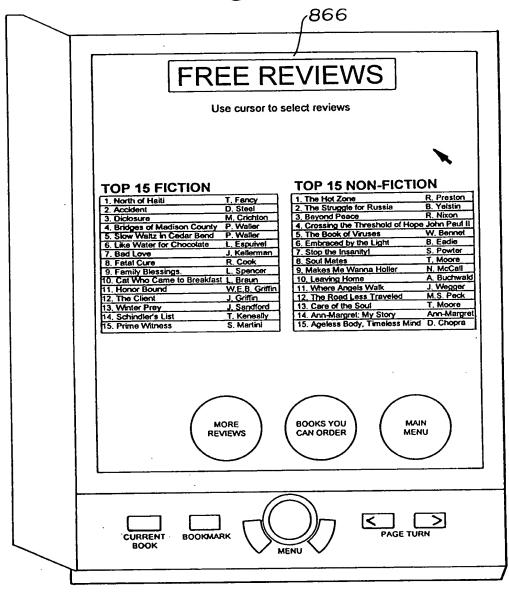
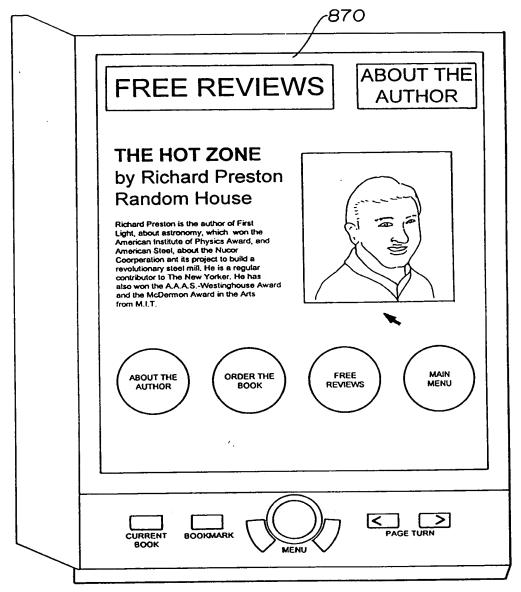
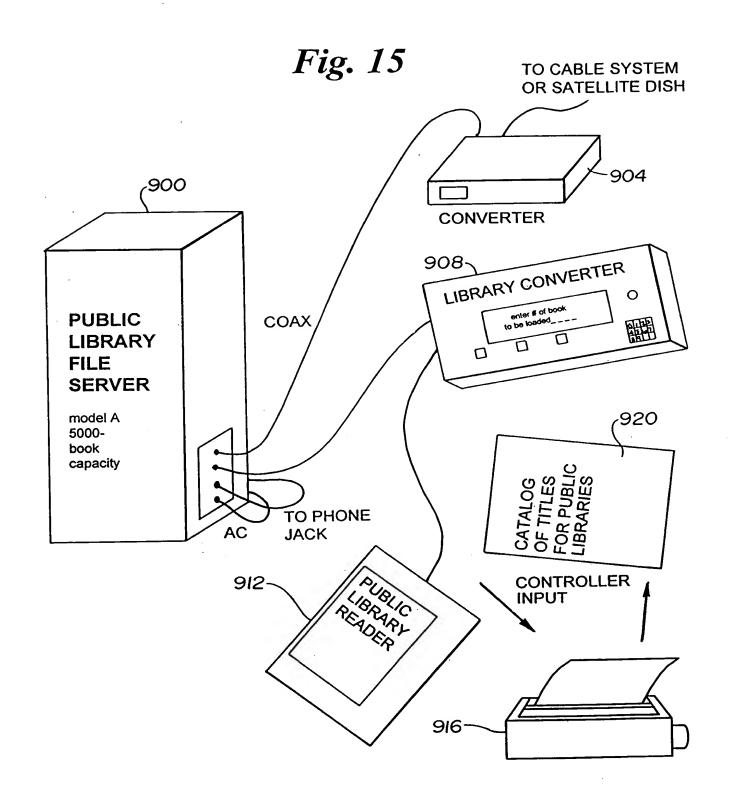
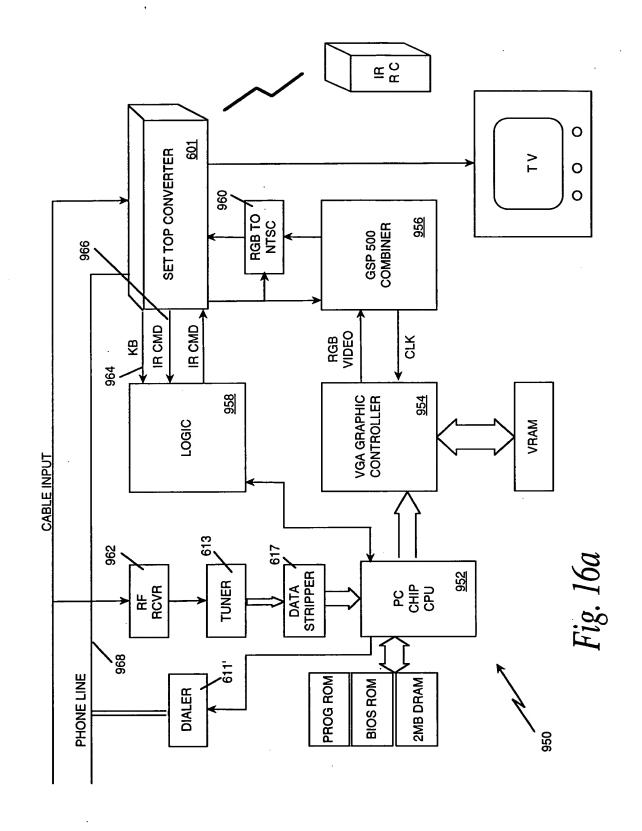


Fig. 14j







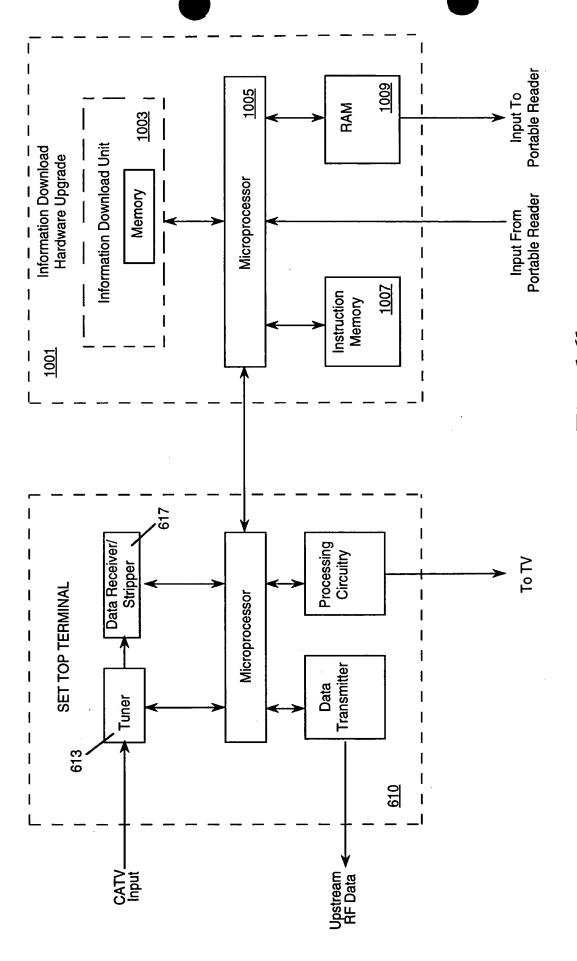


Fig. 16b

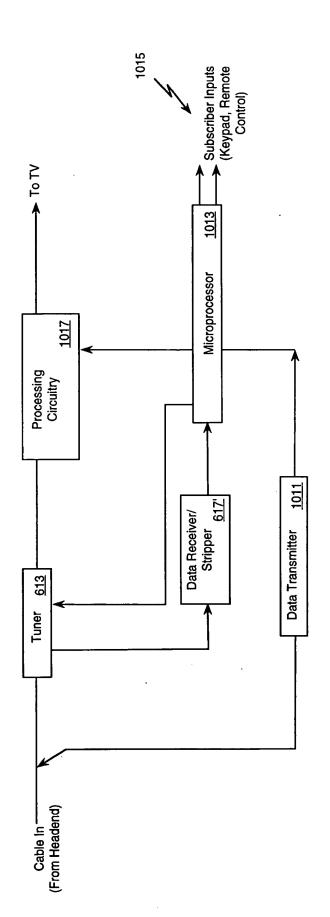
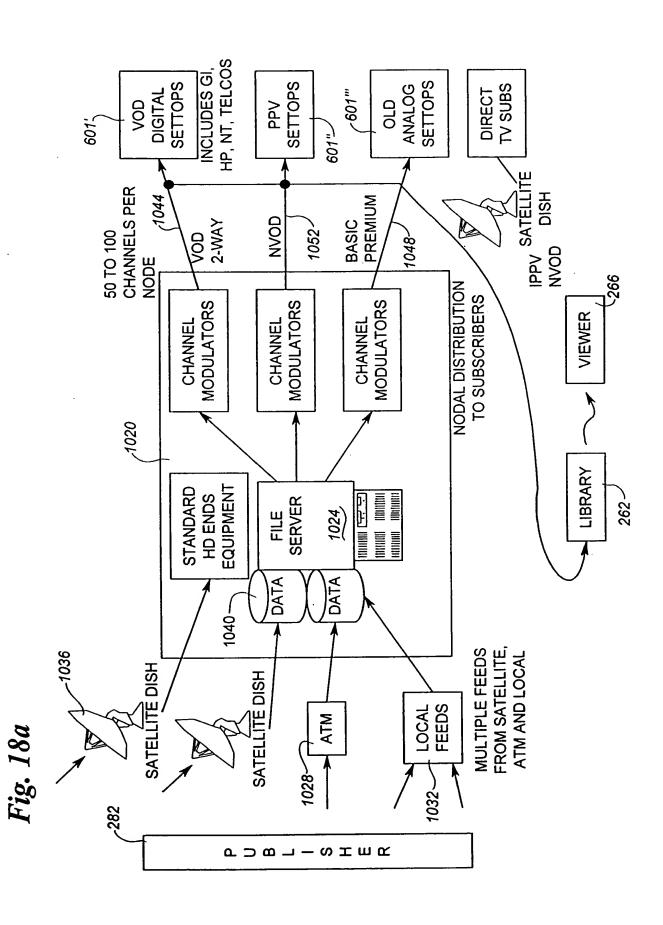
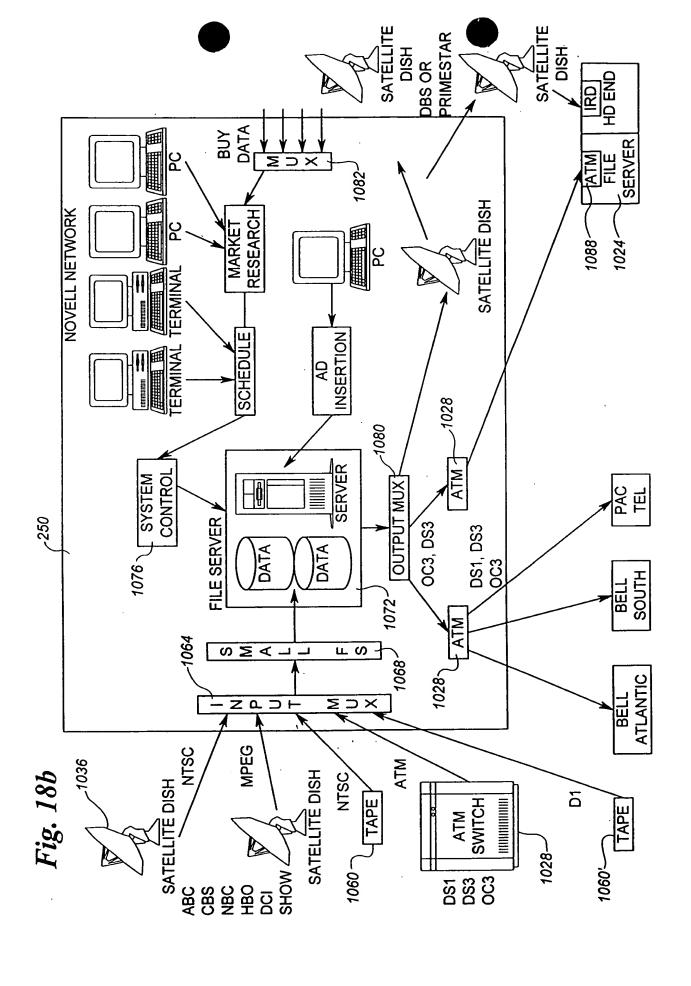
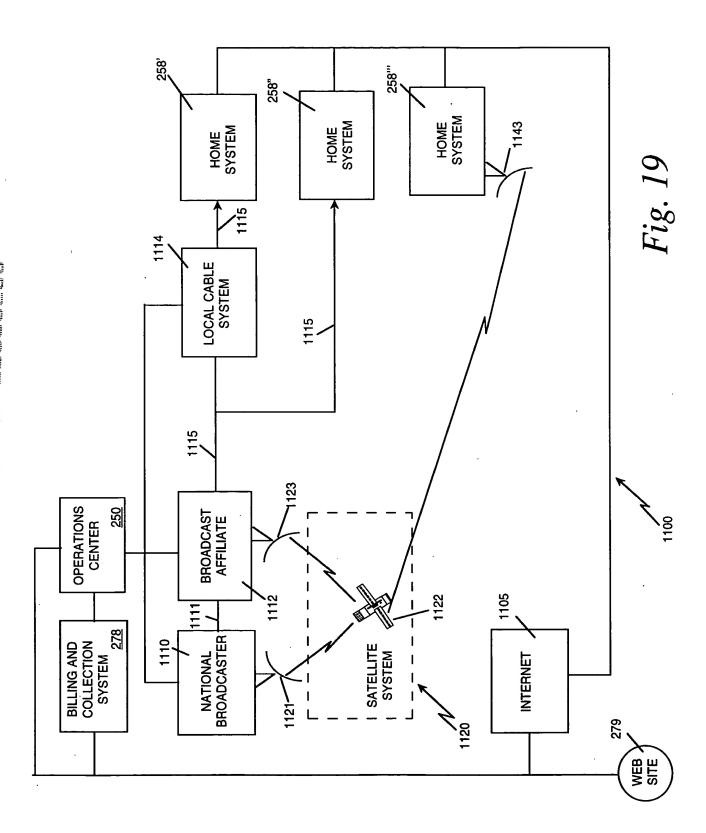


Fig. 17







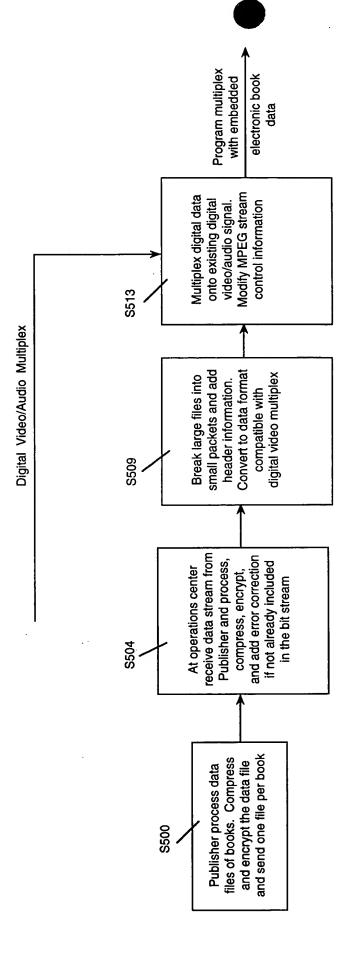


Fig. 20

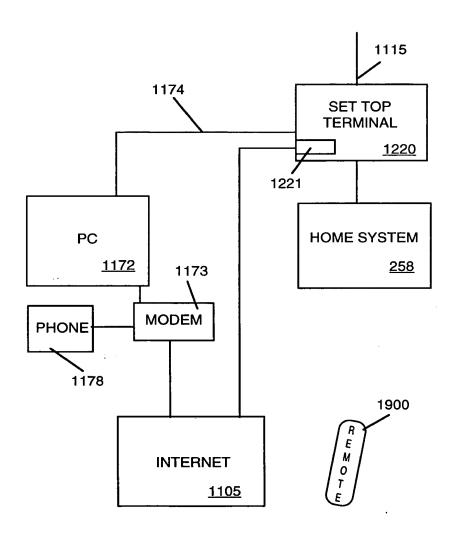


Fig. 21a

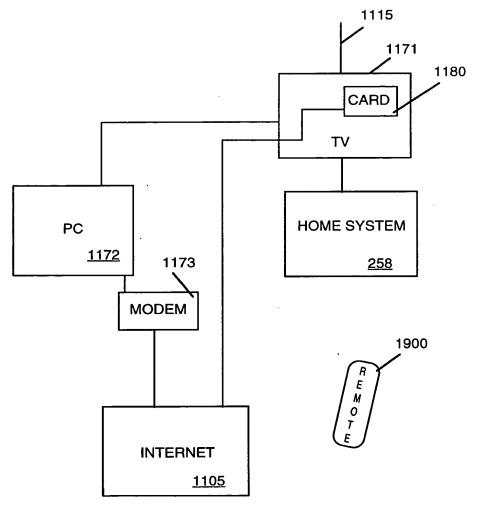
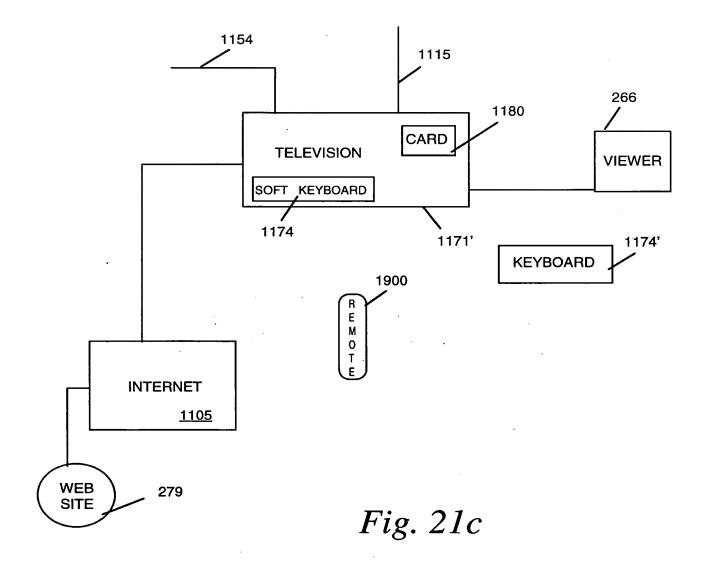
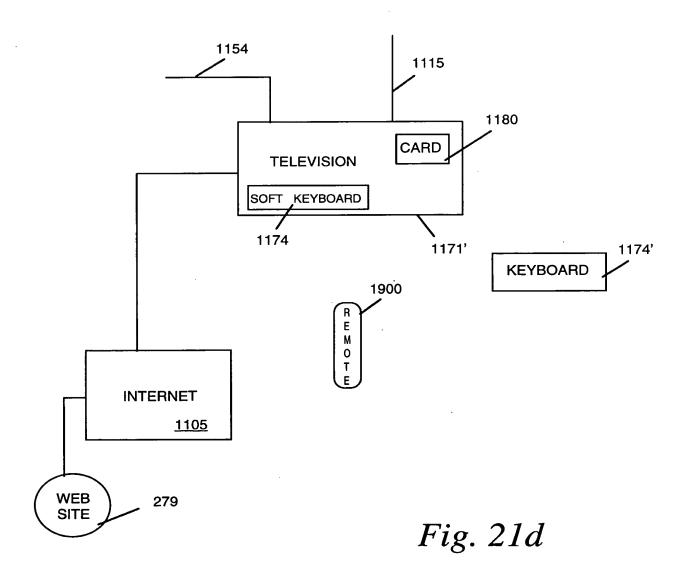
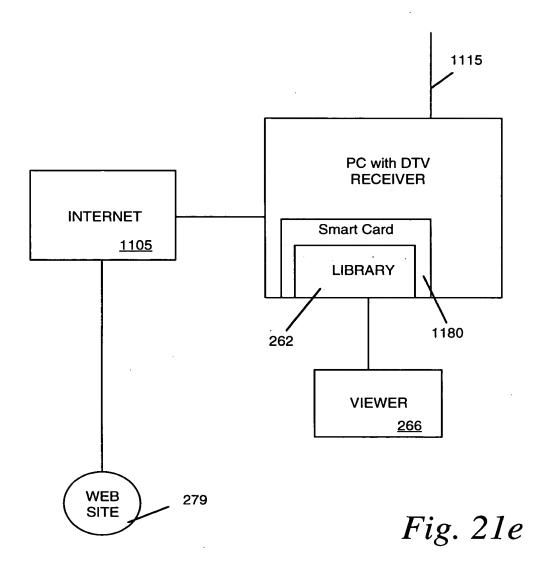


Fig. 21b







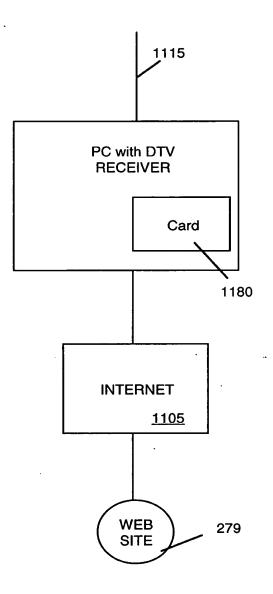


Fig. 21f

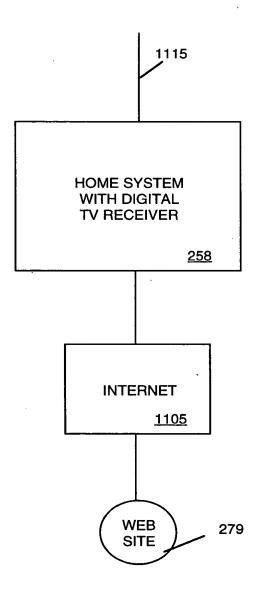


Fig. 21g

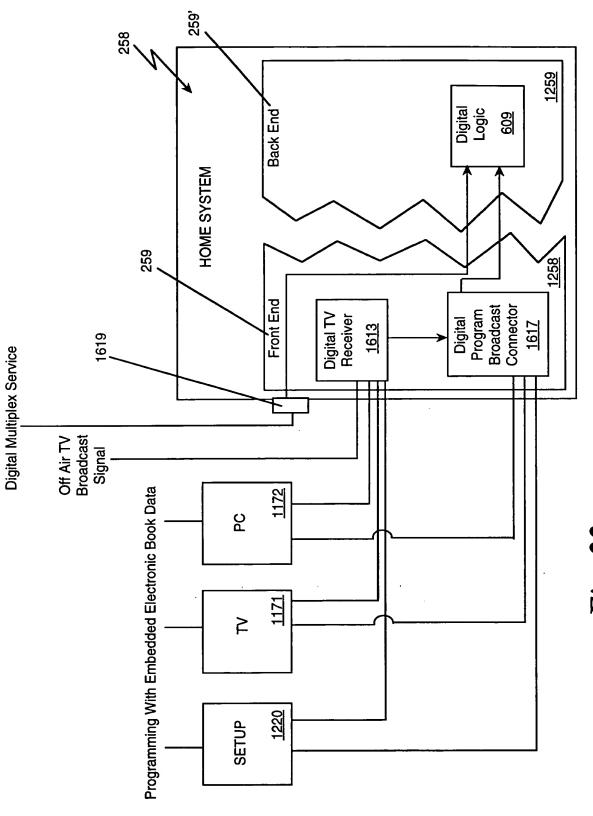


Fig. 22

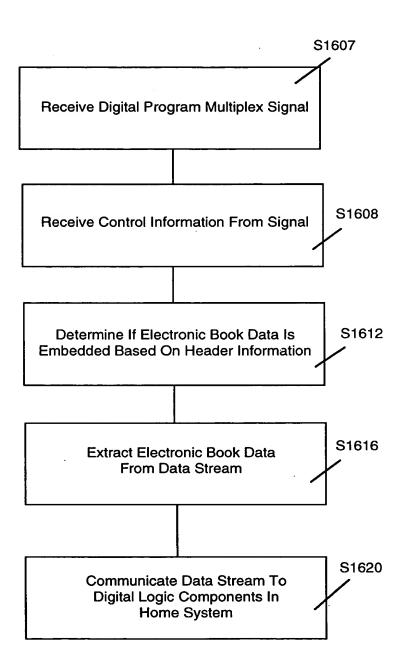


Fig. 23

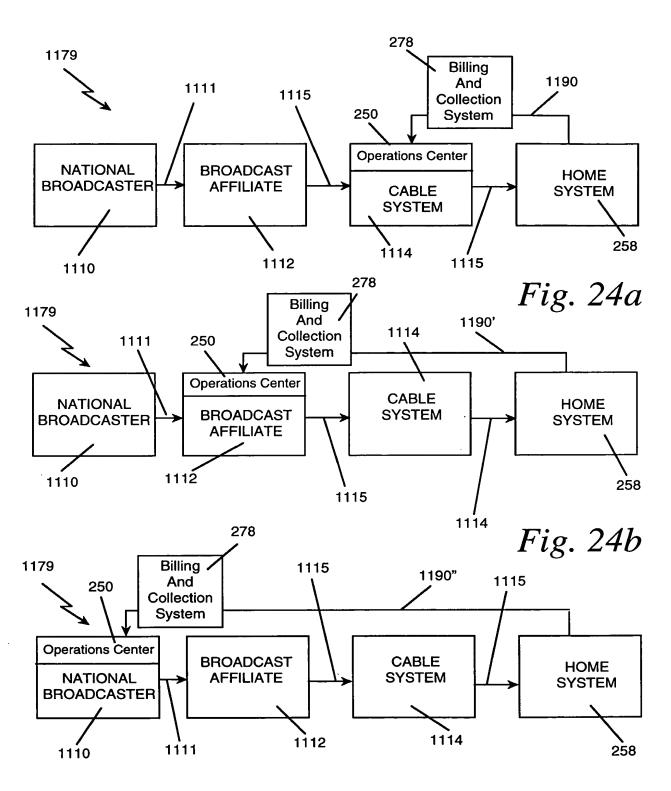


Fig. 24c

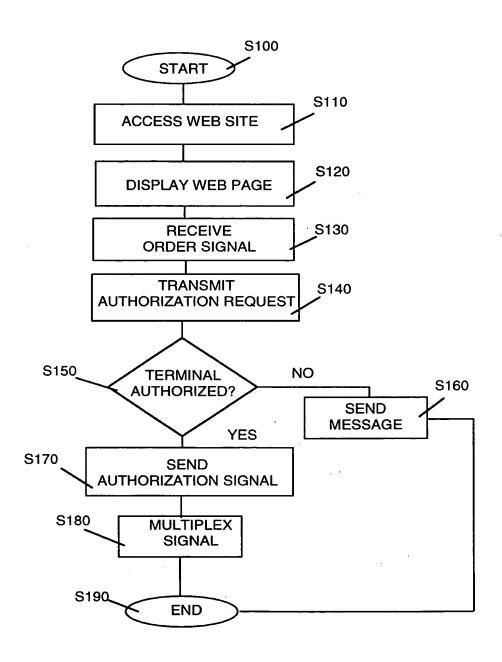


Fig. 25

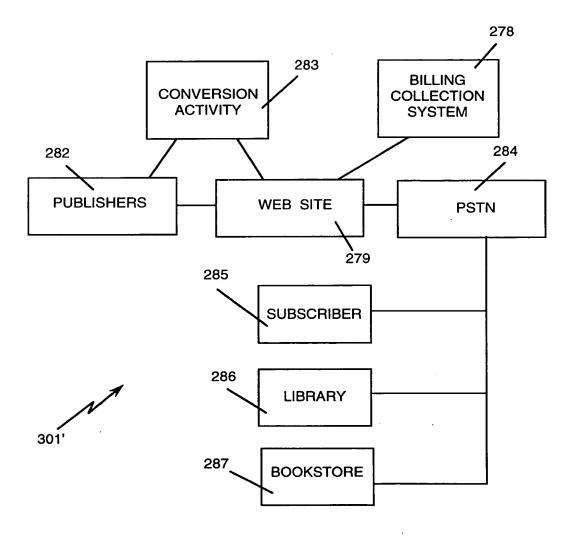
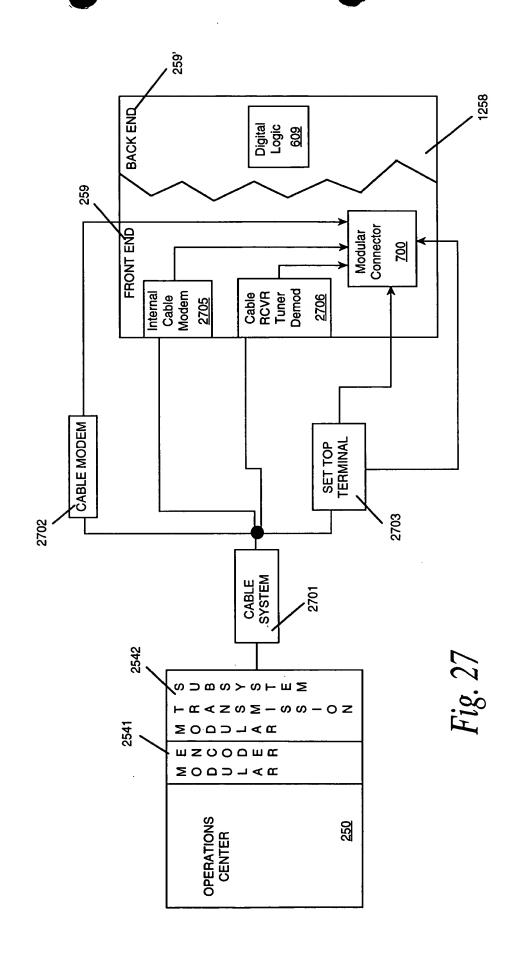
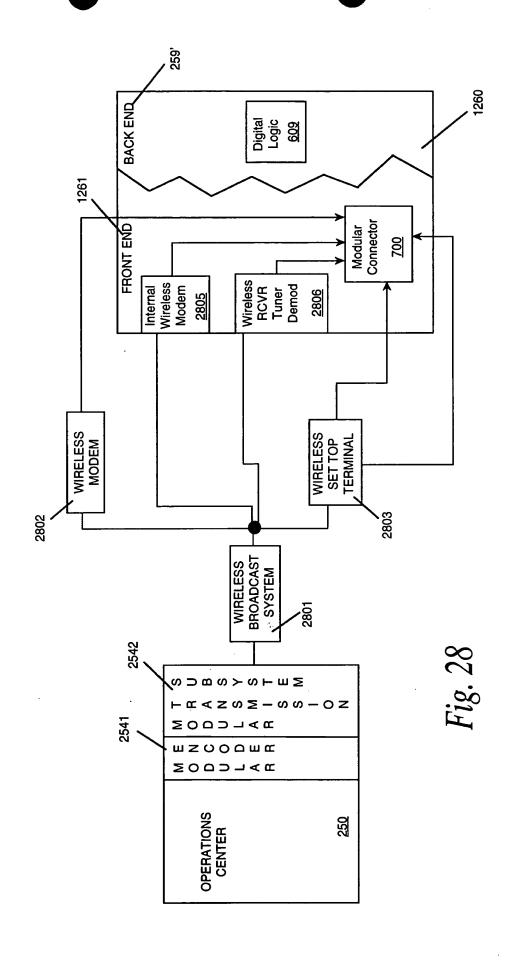
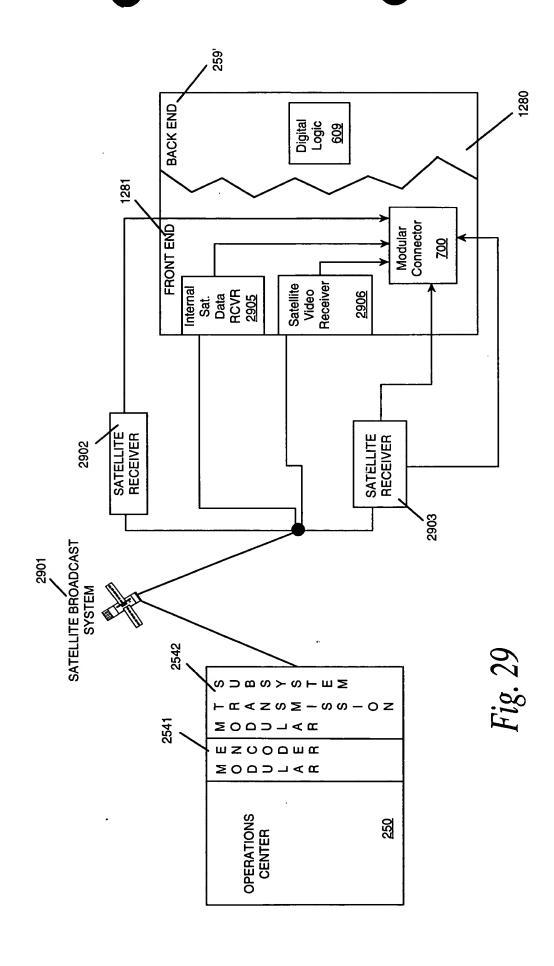
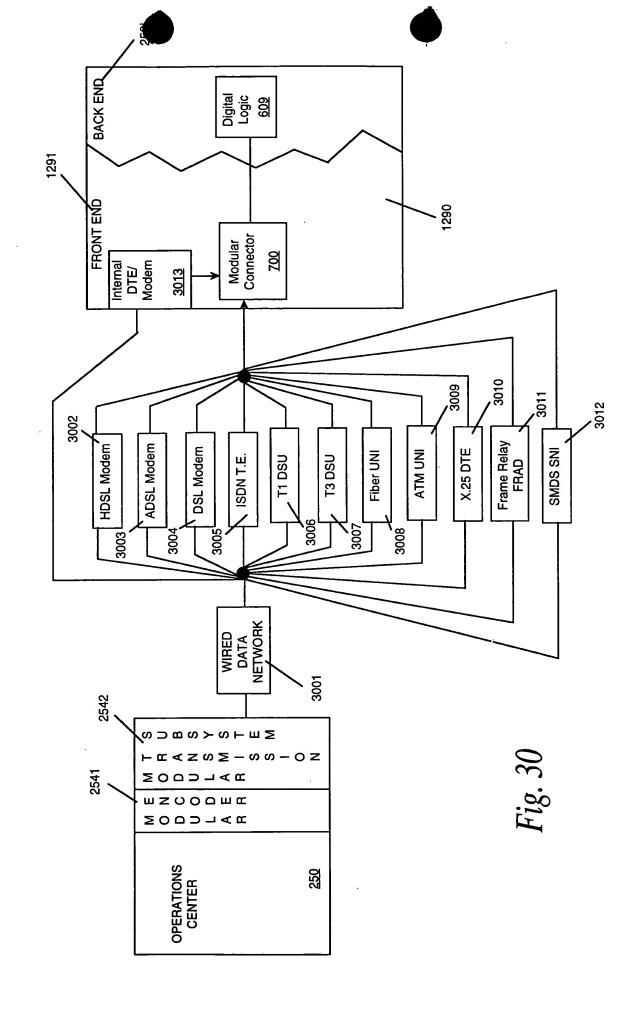



Fig. 26










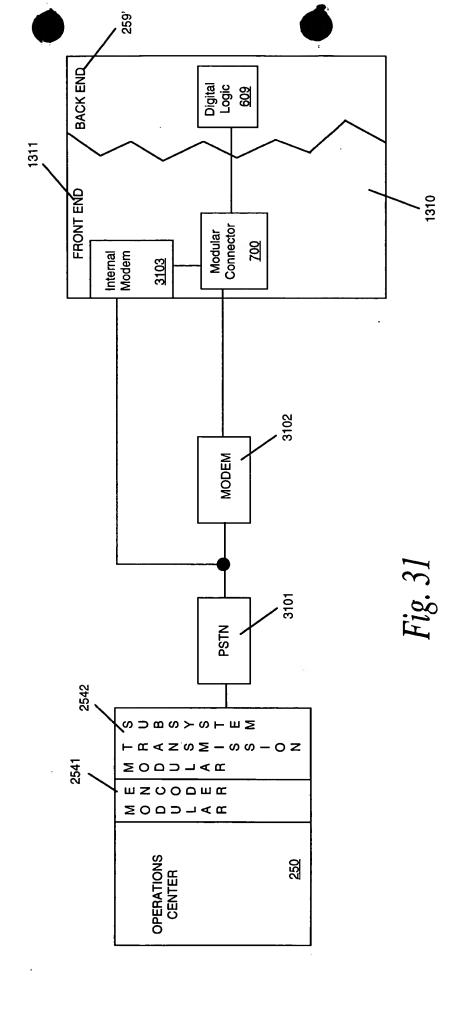

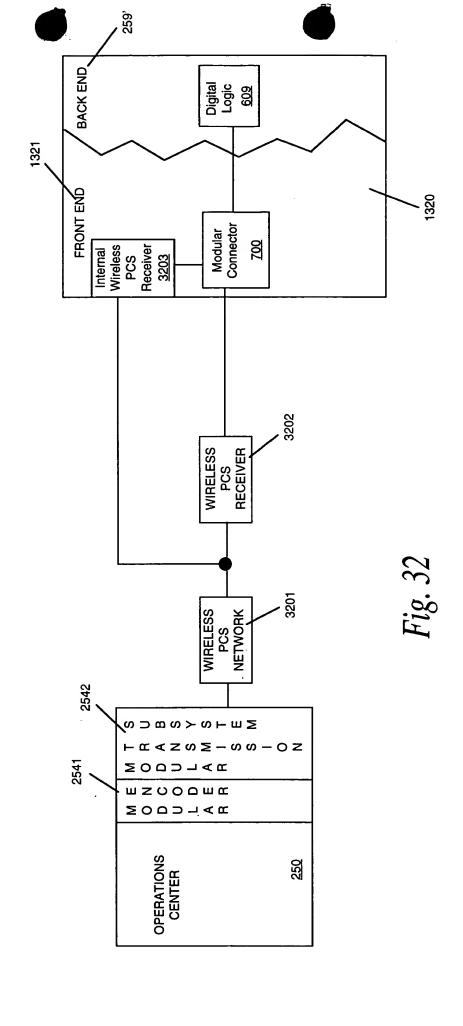

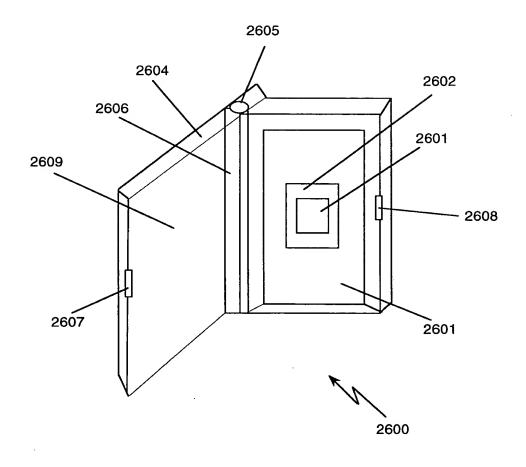


Fig. 33

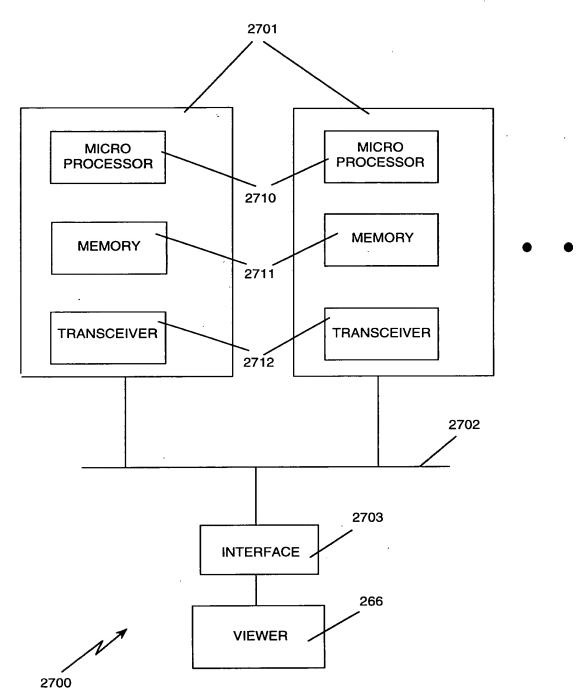


Fig. 34